

POWER INVERTER

PSi1500VA#12VT
PSi2000VA#24VT



USER MANUAL

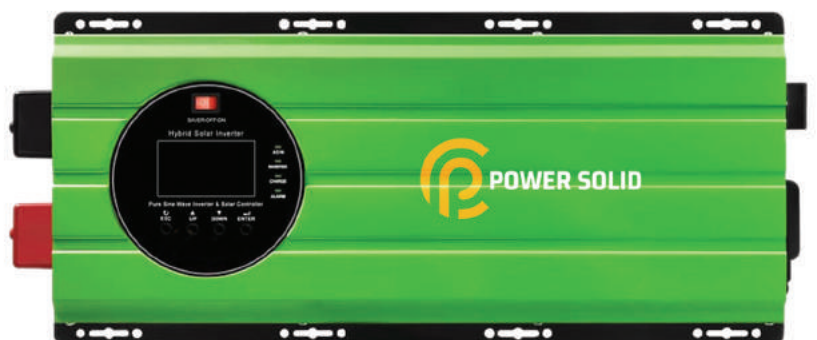


TABLE OF CONTENT

1.	Important Safety Instructions.....	1
2.	Description.....	3
3.	Operation.....	5
4.	Installation.....	8
5.	Troubleshooting	15
6.	Technical Data	16
7.	Warranty scope	18

1. IMPORTANT SAFETY INSTRUCTIONS

SAFETY INSTRUCTIONS

1.1 General

Please familiarize yourself with the safety features and instructions by first reading the documentation supplied with this product before using the equipment. This product has been designed and tested in accordance with international standards. The equipment must be used exclusively for the purpose for which it was designed.



The product is used in conjunction with a permanent energy source (battery). Input and/or output terminals may still be dangerously energized, even when the equipment is switched off. Always switch off the AC supply and the battery before carrying out maintenance or servicing the product.

The product has no internal user-serviceable components. Do not remove the front plate or operate the product if any panels have been removed. Only Qualified personnel must undertake all servicing.

Never use the product in around where there is a risk of gas or dust explosions. (before using) Consult the battery manufacturer's to confirm the products if can be used with the battery. Always comply with the battery manufacturer's safety instructions.

1.2 Installation

Read the installation instructions in the installation manual before installing the equipment.

This is a Safety Class I product (supplied with a protective grounding terminal). Uninterruptible protective grounding must be provided at the AC input and/or output terminals. Alternatively the grounding point

located externally on the product may be used. Whenever it is likely that the grounding protection has been damaged, the product must be turned off and secured against unintended operation.

Ensure that the DC and AC input cables are fused and fitted with circuit breakers. Never replace a safety component with a different type. Always consult the manual to determine the correct component.

Before applying power, ensure that the available power source matches the required specification of the product as described in the manual.

Ensure that the equipment is used under the correct ambient conditions. Never operate the product in a wet or dusty environment. Ensure there is adequate free space for ventilation around the product and check that the ventilation vents are not blocked.

Ensure that the required system voltage does not exceed the product's capacity.

1.3 Transport and Storage

Ensure that the mains power and battery leads have been disconnected before storing or transporting the product.


No liability can be accepted for any transport damage if the equipment is shipped in non-original packaging.

Store the product in a dry environment; the storage temperature must be between -20°C and 60°C.

Consult the battery manufacturer's manual in respect of transport, storage, charging, recharging and disposal of the battery.


2. DESCRIPTION

Fig. 1: rear plate

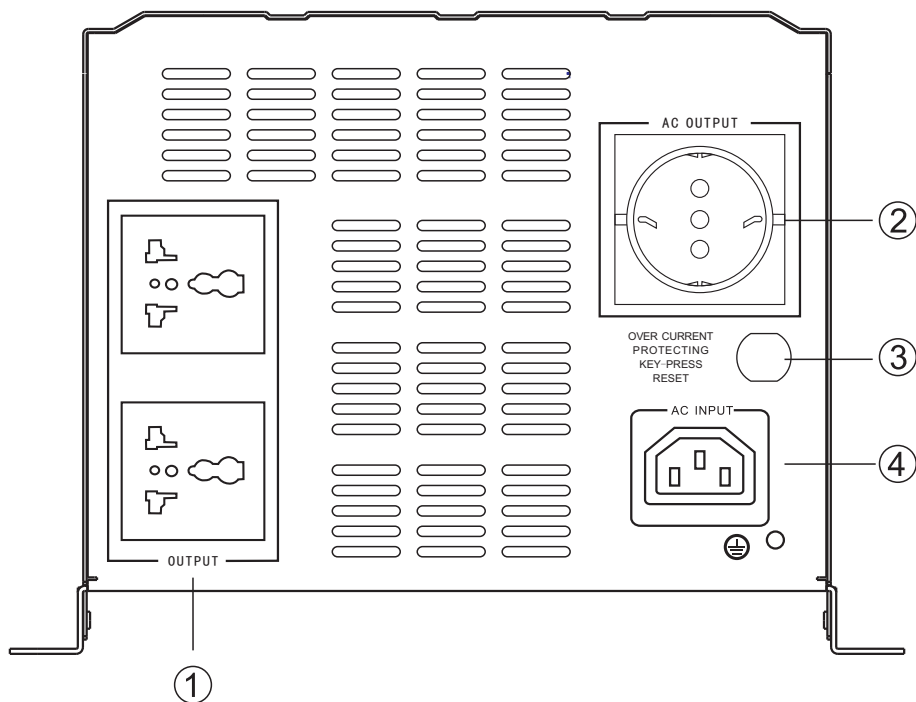

1. Output seat
2. Output seat
3. Fuse(Recoverable over current protector)
4. Input seat

Fig 2: LCD Screen

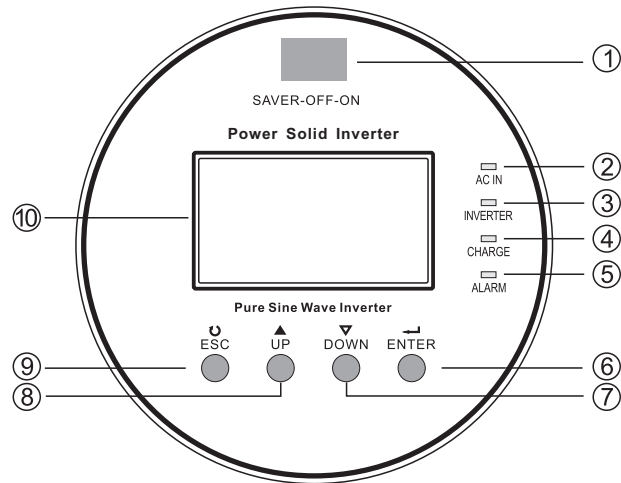

- | | |
|-----------------|----------------------|
| 1、 Power button | 6、 Confirm Key |
| 2、 AC In LED | 7、 Page Down Key |
| 3、 Inverter LED | 8、 Page UP Key |
| 4、 Charge LED | 9、 Escape Key |
| 5、 Alarm LED | 10、 Indicator Screen |

Fig 3: Power Button



- | | |
|--------|------------|
| 1..... | Saver Mode |
| 2..... | Off Mode |
| 3..... | On Mode |

3. OPERATION

3.1 AC In

When power button is switched to “on”, the product is fully functional. The inverter will come into operation and the green LED “AC In” will light up.

3.2 Inverter Mode

In the event of a grid failure, or generator power being disconnected, the unit switches to inverter mode and takes over supply to the connected loads. This happens so fast (less than 10 milliseconds) that computers and other electronic equipment will continue to operate without disruption. The green LED light of “Inverter” indicates on the LCD panel

3.3 Charging Mode

In the event of restoration of grid, or generator power, the Inverter commences charging. The “AC In” green LED light comes up, and the orange “Charge” light starts blinking. When the batteries are fully charged, the blinking orange light changes to Solid Orange.

3.4 Alarm Mode

In the event of high battery discharge, and its gets close to the battery cutoff level, the red “Alarm” light starts showing, and it is accompanied with a beeping sound, this continues until the units gets to the battery voltage cutoff level and its powers down automatically, except there is a restoration of grid supply in which case it changes back to charging mode.

3.5 Bypass Functionality:

When the power control button is switched to “**OFF**”, and there is a grid or generator supply, the inverter supplies output to the load and also charges.

When the power control button is switched to “**OFF**”, and there is no grid or generator supply, the inverter supplies does not supply output to the load.

3.6 Saver Mode

When the power control button is switched to “**SAVER**”, and there is no supply of grid, the inverter's AC output will not be supplied until a load greater than 15 watts is connected to the inverter. It automatically detects the connected load every 15 seconds.

Tab.I

MODE	BUTTON	NO AC SUPPLY	AC SUPPLY
SAVER	I	≤15W LOAD,NO O/P	CHARGING,O/P
		≥15W LOAD,O/P	
ON	II	INVERTER	CHARGING,O/P
OFF	O	NO O/P	CHARGING,O/P

Tab.II

DIP SWITCH	FUNCTION	UP	DOWN
SW 1	BATTERY LOW CUT OFF POINT	10.5V/21V	10V/20V
SW 2	INPUT VOLTAGE RANGE	154-265/83-132 VAC	185-265/96-132 VAC
SW 3	BATTERY CHARGER CURRENT	100%	50%

3.7 Setting Mode

Press “ **ESC** ” and “ **ENTER** ” buttons together, LCD will show “Password:00000” ,it enter into setting mode,the pass word is: 12345,use “ **UP** ” button, and “ **DOWN** ” button to input password, finishing input,choose “Yes” ,then press “ **ENTER** ” to confirm pass word.

After confirm pass word,enter into “System Settings” ,and press “ **ENTER** ” ,it will show “ ◀ ” ,use “ **UP** ” or “ **DOWN** ” buttons to move “ ◀ ” to setting items,then press “ **ENTER** ” ,then you can use “ **UP** ” or “ **DOWN** ” buttons to setting.After finish setting, pls choose “ Yes ” at confirm page.

Setting Items	Parameters	Remarks
Input Range	UPS	180~265/96~132VAC
	INV	155~265/83~132VAC
Input Priority	UTI	AC supply power to load when AC is normal,battery supply power load when AC is off
	SBU	Battery supply power to load,it will change to AC when battery low voltage
CHA Utility	** A	Increase or decrease charging current
CHA Solar	** A	Changing solar charging current(with solar controller type)
Floate CHA	(13-14)*N (N isseries battery qty)	Battery floating voltage setting depends on different batteries
Bulk CHA	(14-14.6)*N (N isseries battery qty)	Battery strong charging setting depends on different batteries
Low Cut-Off	(9.5-11.0)*N	Setting battery protection cut-off voltage
SOL TO AC	(11-12.5)*N	when choose “ SBU” priority,setting voltage return to AC supply
Inverter output	210~240V /105~120V	Setting output voltage
Output Freq	50Hz/60Hz	Setting output frequency
AC CHK Speed	Fast	AC sensitivity setting:Fast,Median,Slow
	Median	
	SLOW	
Fault Restart	NO	No restart if short circuit or over load
	Yes	Restart 3times if short circuit or over load
Backlight	Normal	Backlight will off after 60s
	ON/Off	Setting backlight lighting or close
Factory	Yes	Factory setting parameters
	NO	User can change parameters

4. INSTALLATION



4.1 Locating and Mounting the Inverter

The product must be installed in a dry and well-ventilated area, as close as possible to the batteries. There should be a clear space of at least 10cm around the appliance for cooling.

Excessively high ambient temperature will result in the following:

- Reduced service life.
- Reduced charging current.
- Reduced peak capacity, or shutdown of the inverter.

Never mount the appliance directly above the batteries.


The product is suitable for wall mounting. For mounting see Fig. 1.

The appliance can be mounted horizontally as well as vertically; vertical mounting is preferable. The vertical position offers optimum cooling.

The interior of the product must remain accessible after installation.

Try and keep the distance between the product and the battery to a minimum in order to minimize cable voltage losses.

For safety purposes, this product should be installed in a heat-resistant environment if it is used with equipment where a substantial amount of power is to be converted. You should prevent the presence of e.g. chemicals, synthetic components, curtains or other textiles, etc., in the immediate vicinity.

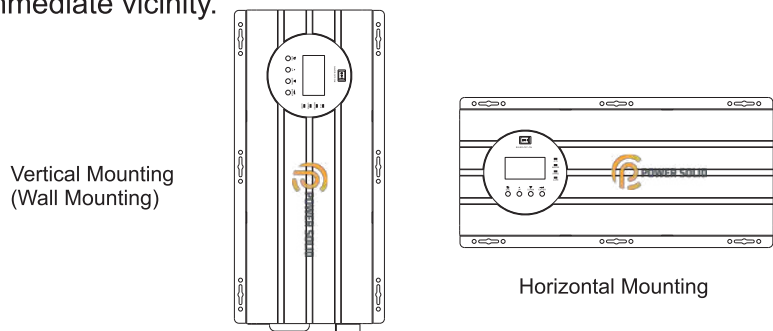

Approved orientations for inverter mounting.

4.2 AC Wiring

This is a Safety Class I product (supplied with a protective grounding terminal). **Uninterruptible protective grounding must be provided at the AC input and/or output terminals and/or chassis grounding point located externally on the product.**

AC Wiring should be connected in the following order:

- AC INPUT (Source)
- AC OUTPUT (Load)



Fig 4:AC input/Output Connections

AC Input: The inverter comes installed with Input protection circuit breaker. This should be switched off before the cable is installed.

Remove the AC wiring compartment cover to gain access to the AC terminal strip inside.

Run the three conductors AC INPUT (source) wiring into the wiring compartment. Connect the AC INPUT ground wire first to the ground terminal (ground symbol with circle around it), and then connect the AC INPUT line (L) and neutral wire (N) to the corresponding AC input terminals.


AC Output: The inverter comes installed with Input protection circuit breaker. This should be switched off before the cable is installed. In a similar manner, connect the AC OUTPUT (load) wiring to the Inverter AC output terminal as was done on the AC Input

After wiring, double check and review all connections to make sure the wires are in the correct terminals and the terminals are tight

To ensure the best performance from your inverter system,do not use old or untested batteries.Batteries should be of the same size,type, rating,and age.

AC Safety Grounding: During the AC wiring installation,AC input and output ground wires are connected to the inverter.The AC input ground wire must connect to the incoming ground from your AC utility source. The AC output ground wire should go to the grounding point for your loads (e.g.a distribution panel ground bus).

4.3 DC Wiring:

 WARNING
<p>DO NOT connect the DC wires from the battery bank to the inverter until:</p> <ul style="list-style-type: none">● All AC wiring is complete,● The correct DC and AC protection switches are OFF● The correct DC voltage and polarity have been verified


Depending upon the type of batteries you use in the installation (6 or 12 VDC),the batteries must be wired in series,parallel,or series-parallel. The interconnecting DC wires must be sized and rated exactly the same as those that are used between the battery bank and the inverter.

To ensure the best performance from your inverter system,do not use old or untested batteries.Batteries should be of the same size,type, rating,and age.

4.3.1 procedure

In order to fully utilize the full capacity of the product,batteries with sufficient capacity and battery cables with sufficient cross section should be used.

Proceed as follows to connect the battery cables:

 WARNING
<ul style="list-style-type: none">• Use an insulated box spanner in order to avoid shorting the battery.• Avoid shorting the battery cables.

Connect the battery cables: the + (red) on the left and the - (black) on the right, to the battery. Reverse polarity connection (+ to - and - to +) will cause damage to the product. (Safety fuse inside the Inverter unit can be damaged)

The DC overcurrent device (i.e., fuse or circuit breaker) must be placed in the positive (RED) DC cable line between the inverter's positive DC terminal and the battery's positive terminal (RED); as close to the battery as possible.

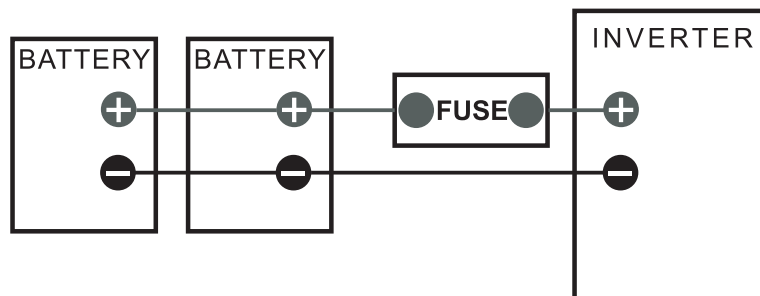


Fig 5:Inline fuse

A brief spark or arc may occur when connecting the battery cables to the inverter DC terminals; this is normal and due to the inverter's internal capacitors being charged.

All wiring to the battery terminals should be checked periodically (once a month) for proper tightening

Secure the nuts tightly in order to reduce the contact resistance as much as possible.

Be aware that over-tightening or misthreaded the nuts on the DC terminals can cause the bolts to strip and snap/break off.

4.3.2 DC Wiring Size

It is important to use the correct sized DC wire to achieve maximum efficiency from the system and to reduce fire hazards associated with overheating. Always keep your wire runs as short as practical to prevent low voltage shutdowns and to keep the DC breaker from nuisance tripping (or open fuses) because of increased current draw.

The correct minimum DC wire size (and corresponding overcurrent device) is required in order to reduce stress on the inverter, minimize voltage drops, increase system efficiency and ensure the inverter's ability to surge heavy loads.


If the distance from the inverter to the battery bank is ≤ 5 feet, use a minimum DC wire size of #2 AWG (33.6 mm²). If the distance between the inverter and the battery is > 5 feet, the DC wire will need to be increased. Longer distances cause an increase in resistance, which affects the performance of the inverter.

Tab.III

Models	Minimum DC Wire Size(rating)	Maximum DC Fuse size	DC Grounding wire size
PSi1500VA#12VT	16/8/4mm ²	200/100/50A	2.5mm ²
PSi2000VA#24VT	25/10/6mm ²	250/120/60A	2.5mm ²

4.3.3 Parallel and Series Connection


12 Volts Battery In Parallel

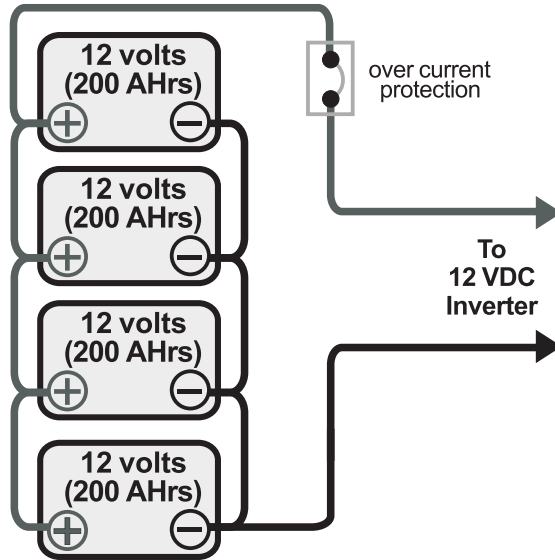

12 volt battery (total capacity=800 Ah)

Fig 6. Parallel Battery Wiring

12 volts Battery in Series

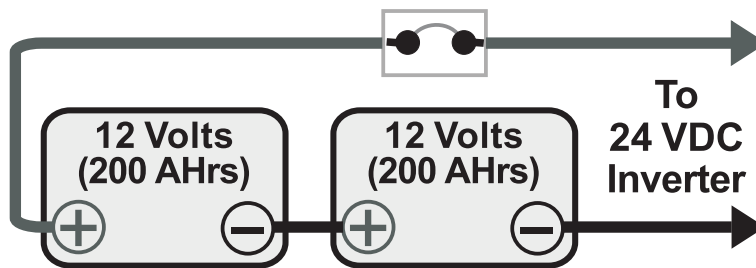


24 Volts battery (total capacity=200 Ah)

Fig 7. Parallel Battery Wiring

Difference between Series and Parallel connection

Batteries in Parallel


Voltage remain the same
Ah capacity doubles

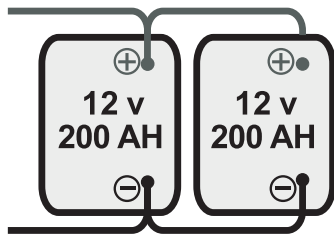

**System Voltage = 12Volts
Ah Capacity = 400AH**

Batteries in Series

Voltage doubles
Ah capacity stays the same

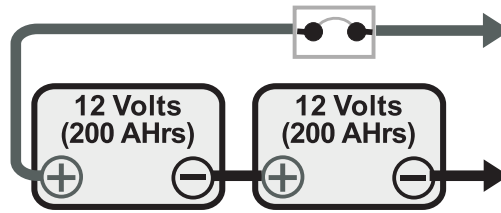

**System Voltage=24V
Ah Capacity=200AH**

5. TROUBLESHOOTING

Proceed as follows for quick detection of common faults. DC loads must be disconnected from the batteries and the AC loads must be disconnected from the inverter before the inverter and/or battery charger is tested.

Consult your local dealer/repair center if the fault cannot be resolved.

Tab.V

Problem	Cause	Solution
The inverter fails to operate when switched on	Battery terminal not firm	Tighten the battery terminals.
Continuous spark from the inverter terminal	Battery terminal reversal	Check and connect the cable to the right terminal lead.
No output from inverter	Output cable terminals loosed	Open the casing and connect the output cable terminals firm to the appropriate lead.
Inverter not charging battery	input power less than(<) 150/83~96VAC	A step-up stabilizer of rating higher than the inverter should be installed.
Continuous alarm when the inverter is loaded	Overloading condition	Check the loads and disconnect heavier loads.

6. TECHNICAL DATASHEET

Model	PSi1500VA#12VT
Capacity (VA)	1500VA
Input Voltage (DC)	12V
Input Nominal Voltage	220VAC
Input Voltage Range	154-265VAC (AC Mode);185-264VAC±3V (UPS Mode)
Input Frequency	50-60HZ Auto sensing
Output Power Factor	0.8
Output Rated Power	1200W
Output Voltage	220VAC
Output Frequency	50/60HZ
Output Waveform	Pure Sine Wave
Output Transfer Time	<8ms
Output Bypass Mode	Yes
Output Saver Mode	Yes
Output Efficiency	>98%
Input Protection	Circuit Breaker
Output Protection	Circuit Breaker
Battery Type	AGM-Deep Cycle, Gel/Up to 500AH
Battery AC Charging	25A
Battery Low Level	10V or 10.5V
LCD indicator status	AC input voltage, AC input frequency, PV voltage, PV current, Output Voltage, Output Frequency, Battery voltage,
LED indicator status	AC Line In: Green/Inverter: Green/Charging: Yellow/Alarm: Red
Protections	Over load, over temp, over charging, battery low, battery reverse connects, high AC voltage etc.
Alarm LOW battery	Audible alarm-5 seconds beeping
Alarm Overload alarm	Audible alarm- continuous beeping
Alarm Fault	Audible alarm- continuous beeping
Environment Temperate	0-40℃
Humidity	—10℃~90℃ Non condensing
Noise(dB)	>55dB
Size L*W*H(mm)	430*220*185mm
Packaging	560*335*250mm
Weight (kg)	14.5

Model	PSi2000VA#24VT
Capacity (VA)	2000VA
Input Voltage (DC)	24V
Input Nominal Voltage	220VAC
Input Voltage Range	154-265VAC (AC Mode);185-264VAC±3V (UPS Mode)
Input Frequency	50-60HZ Auto sensing
Output Power Factor	0.8
Output Rated Power	1600W
Output Voltage	220VAC
Output Frequency	50/60HZ
Output Waveform	Pure Sine Wave
Output Transfer Time	<8ms
Output Bypass Mode	Yes
Output Saver Mode	Yes
Output Efficiency	>98%
Input Protection	Circuit Breaker
Output Protection	Circuit Breaker
Battery Type	AGM-Deep Cycle, Gel/Up to 500AH
Battery AC Charging	18A
Battery Low Level	20V or 21V
LCD indicator status	AC input voltage, AC input frequency, PV voltage, PV current, Output Voltage, Output Frequency, Battery voltage,
LED indicator status	AC Line In: Green/Inverter: Green/Charging: Yellow/Alarm: Red
Protections	Over load, over temp, over charging, battery low, battery reverse connects, high AC voltage etc.
Alarm LOW battery	Audible alarm-5 seconds beeping
Alarm Overload alarm	Audible alarm- continuous beeping
Alarm Fault	Audible alarm- continuous beeping
Environment Temperature	0-40°C
Humidity	—10°C~90°C Non condensing
Noise(dB)	>55dB
Size L*W*H(mm)	430*220*185mm
Packaging	560*335*250mm
Weight (kg)	17

7. Warranty scope:

The following is not within the scope of warranty:

- (a) Battery configured by user.
- (b) Do not operate according to the user's manual, resulting in damage to the machine.
- (c) Mechanical damage due to natural disasters such as fire, flood, etc.
- (d) Products beyond the warranty period, the implementation of paid maintenance services

Trademarks

Other trademarks, registered trademarks, and product names are the property of their respective owners and are used herein for identification purposes only.

Exclusion for Documentation

- (A) Makes no warranty as to the accuracy, sufficiency or suitability of any technical or other information provided in its manual or other documentation.
- (B) Assumes no responsibility or liability for losses, damages, cost or expenses, whether special, direct, indirect, consequential or incidental, which might arise out of the use of such information. The use of such information will be entirely at the user's risk.



POWER SOLID

WWW.POWERSOLID.VN